



reddmango

LIBRA Q577 |

User Manual



Digital Photo Frame

USER manual

Introduction:

Thank you for purchasing the reddmango LIBRA QS771 Digital Photo Frame. Please read this manual carefully in order to get the most out of your device.

Main Features

- 7 inch Digital TFT LCD: 800*480
- High pixel resolution (800*480) for accurate and sharp photos on the 6.5 inch viewable display
- Displays digital photos (JPEG) without a computer
- Slide show with multiple transition effects
- Calendar and clock display
- Auto power On/Off
- Compatible with SD/MMC/MS/XD memory cards
- USB Host for connecting to the USB mass storage
- Controlled by 7 buttons on the back of the unit

Buttons & Functions

POWER	Turn the unit on/off
Play/Pause/OK	<ol style="list-style-type: none">1. Confirm option selection and select relevant functions.2. In the slide show mode, press this button to pause and again to resume; press and hold it to call out relevant tool bar.
UP	Move up
DOWN	Move down
LEFT	Move left
RIGHT	Move right
ESC	<ol style="list-style-type: none">1. Return to previous level.2. In the slideshow mode, press and hold it to activate or stop the background music.

Function Description

Main menu

- When a memory device is inserted into the Digital Photo Frame, the corresponding icon appears on the main menu.
- On the main menu, you can select connected source to view photos, change frame settings, or display the calendar/clock.

Turn on the power to access the main menu, all connected sources, clock and setup icons are displayed.

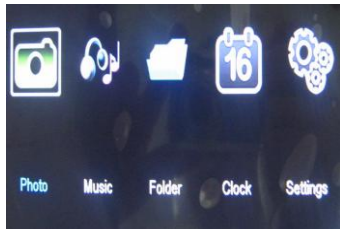


Photo	to activate the photo slide show
Music	to play the MP3 music
Folder	to select the photos to be played in different media storage device
Clock	to display the Calendar or Clock on the screen.
Settings	to customize the settings of Digital Photo Frame.

Note: If you insert a memory device to the frame after switching “On” the frame, the customise Digital photo frame will start a slideshow automatically.

Viewing thumbnails



In Photo mode, the photos can be displayed on the screen as thumbnails by pressing **ESC** button. Up to 15 photos are displayed at a time.


1. To navigate through the thumbnails or move to the next or previous page of thumbnails, press the [**UP**], [**DOWN**], [**LEFT**] or [**RIGHT**] button.

Playing a slideshow

You have two ways to start a slideshow:

1. In main menu mode, press the [**PHOTO**] button to start a slideshow.
2. During the slide show, press [**ESC**] button to pop-up the thumbnails to select a photo and then press the [**OK**] button to start slide show from the current photo.
 - To pause the slideshow and view a single photo, press the [**OK**] button. To resume the slideshow, press the [**OK**] button again.
 - Skip to previous or next photo, press the [**LEFT**] or [**RIGHT**] button.
 - Press [**UP**] or [**DOWN**] button to rotate a photo clockwise.
 - Press and hold the [**OK**] button to show tool bar.
 - Press the [**ESC**] button to exit the slideshow and view the photos in thumbnail.
 - Press and hold the [**ESC**] to start or stop the background music playing.

Browsing photos

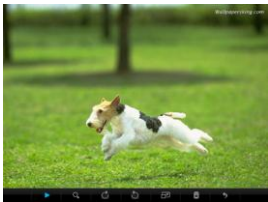











Change OSD to on
screen display

In slideshow mode, press the **[OK]** button to start browsing photo one by one.

 1. Press the **[LEFT]** or **[RIGHT]** button to select the photos one by one.
2. Press **[UP]** or **[DOWN]** button to rotate a photo clockwise.

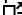You also can use the OSD tool bar menu to view the photos:.


3. Press and hold the **[OK]** button during viewing a photo or slideshow. The OSD tool bar menu appears on the screen and slideshow pauses.
4. Press the **[LEFT]** or **[RIGHT]** button to navigate between the icons on the OSD tool bar menu.
 - Start or resume slideshow from the current photo, highlight  and press **[OK]**, and then the  icon is changed to .
 - Zoom in a photo, highlight  and press **[OK]** repeatedly to magnify a photo.
 - Rotate a photo clockwise, highlight  and press **[OK]** repeatedly
 - Rotate a photo counterclockwise, highlight  and press **[OK]** repeatedly
 - Toggle between 4:3 and 16:9 aspect ratio for a photo to fit the screen, highlight  and press **[OK]**.
 - To copy the photo from memory card to built-in flash memory, highlight  and press **[OK]**
 - Delete a photo, highlight  and press **[OK]**.
 - Exit and close the tool bar, highlight  and press **[OK]**.

Music

When you have MP3 files stored in the media devices, you can have the music play in two modes :

1. Select the **Music** icon on the main menu and press **[OK]**, you will see the MP3 files list if you have them stored in the media devices. Press **[UP]** or **[DOWN]** to select the song you want to play and press **[OK]**. While the music is playing, press the **[UP]** or **[DOWN]** to select the “next’ or “previous” song; press and hold the **[UP]** or **[DOWN]** to adjust the music volume up or down; press **[LEFT]** or **[RIGHT]** to have the song playing fast forward or backward.
2. In photo slideshow mode, press and hold **[ESC]** button to play or stop the music. While the music is playing, press and hold the **[UP]** or **[DOWN]** to adjust the music volume up or down; press and hold **[LEFT]** or **[RIGHT]** for next or previous songs to be played.

Displaying Clock/Calendar

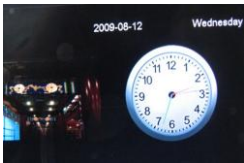

You can switch your Digital Photo Frame to Clock/Calendar mode so that the current date and time is displayed on the screen with a slide show in thumbnail.

1. Select the **Clock** icon on the main menu and press the **[OK]** button; The Digital Clock, Analog Clock or Calendar is displayed on the screen and all photos in all the memory sources start a thumbnail slide show.
2. Press the **[OK]** button to toggle through Digital Clock, Analog Clock and Calendar mode.
3. Press the **[LEFT]** or **[RIGHT]** button to skip to previous/next photo.
4. To exit the Clock/Calendar mode, press the **[ESC]** button to return to main menu.

Note:

- *The date and time can be adjusted in **Settings** mode.*
- *You can choose to display digital clock, analog clock or calendar in **Settings** mode.*

Changing Frame Settings



The system settings let you customise and configure your Digital Photo Frame. Select the **Settings** icon on the main menu and press the [OK] button. The Setup Menu appears on the screen.

1. To select a setting item, press the [UP] or [DOWN] button and then press the [OK] button.
2. To change the value, press the [UP] or [DOWN] button and then press the [OK] button. Or press [ESC] button to exit.
3. Press the [ESC] button to return to the main menu.

Setting items

Setting Items	Description
Interval	Set up the interval time for slideshow. The available options include: 3s, 5s, 15s, 1 min, 15mins.
Transition Effect	Set up the style of transition while playing a slide show.
Clock Mode	To choose a mode for displaying the clock. The available options include: Calendar, Digital Clock, Analog Cock.
Time Setting	Adjust the time.
Date Setting	Adjust the date.
Language	Set up the display language.
Brightness	Adjust the brightness of the screen. The available options include: 3, 2, 1, 0, -1, -2, -3.
Contrast	Adjust the contrast of the screen. The available options include: 3, 2, 1, 0, -1, -2, -3.
Saturation	Adjust the saturation of the screen. The available options include: 3, 2, 1, 0, -1, -2, -3.
Auto Power On	Set the Digital Photo Frame to turn on at the specified time everyday or once.
Auto Power Off	Set the Digital Photo Frame to turn off at the specified time everyday or once.
Alarm Setting	Set the Alarm On/Off and time.
Initialize Settings	Reset all settings to the default settings.

Setting Time & Date

You can set the system time to current date and time so that the Clock and Calendar display are correct.

1. Select the **Settings** icon on the main menu and then press [OK]. The Setup Menu appears on the screen.
2. Press [UP] or [DOWN] to select **Time Setting** or **Date Setting**, and then press [OK].
3. Use [LEFT] or [RIGHT] to highlight next or previous setting (hour/minutes/time format or month/day/year), and then press [UP] or [DOWN] to adjust the time or date.
4. Press [OK] to confirm or press [ESC] to exit.

Setting auto power on/off

You can enable the Digital Photo Frame to power on or off automatically at a specified time.

1. Select the **Setting** icon on the main menu and then press [OK]. The Setup Menu appears on the screen.
2. Press [UP] or [DOWN] to select **Auto Power On** or **Auto Power Off**, and then press [OK].
3. Use [LEFT] or [RIGHT] to highlight next or previous setting (hour, minutes, on/off), and press [UP] or [DOWN] to adjust the time or select the following:
 - **Off:** Disables the auto power on or off function.
 - **On:** Enables the auto power on or off function.
4. Press [OK] to confirm or press [ESC] to exit. **Note:** The current time must be set correctly before setting up this feature.

Specification

Display	Digital LCD, TFT Panel size: 7"(6.5" viewable) Screen aspect ratio: 16: 10 Resolution: 800*480 pixels
I/O	DC in, USB port, SD/MMS/MS/xD card slot, CF card slot
Power Supply	AC Adapter (Input: 100~240V AC, 50~60Hz; Output: DC 5V 1.5A)
USB port	USB Host 2.0 (High Speed) Supports USB flash media
Supported peripheral devices	SD™ (Secure Digital Card), MMC™ (MultiMedia Card), MS™ (Memory Stick). XD™(XD-Picture Card), CF
Supported photo format	JPEG, Baseline
Supported music format	MP3
Working condition	Humidity <85%, -10~40°C
Storage condition	Humidity<85%, -20~60°C

Contacting reddmango:

Should you have other question that are not answered by this user manual, please feel free to contact the reddmango support team by using our online customer support portal at www.reddmango.com/support.

We aim to answer all online inquiries within 48 hours.

You will also find information about our latest products at www.reddmango.com.

reddmango

<http://www.reddmango.com>