



User Manual

ANGORA MR118 Digital Audio Player

For further information please refer to: www.reddmango.com

For further assistance or advice please refer to www.reddmango.com/support

All queries will be responded to within 3 day's.

For Your Safety

Read this user guide carefully to ensure proper use of the product and to avoid any danger or physical damage.

Please use the MR118 carefully and according to the user manual to avoid fire, electric shock, etc.

1. Please do not leave the MR118 in a place subject to moisture or temperature higher than 35°C or lower than 5°C.
2. Please do not repair the MR118 by yourself, or it will cause damage.
3. Please avoid getting the MP3 player wet or immersing it in water.
4. The data storage will be write-protected if you switch the **【HOLD ▶】** button to "Lock" position.
5. Please backup important data onto your personal computer as repair or other causes may result in data loss.

When using the MR118 audio player, pay attention to the volume, if the volume is set to high it can damage hearing.

1. Please do not use the MR118 whilst driving or riding a bicycle.
2. Please do not use the MR118 whilst crossing any road which may have motor vehicles passing.
3. Please stop using the device or turn down the volume if you have ringing in your ears.
4. Always use the accessories provided by or approved by our company, also do not spray water on the player.

Accessories

1. AAA Battery



2. Earphone



3. *User Guide*




4. *Lanyard*



1. OPERATION OVERVIEW

1. **【<<】** Backward: Push the key to skip to previous track
2. **【>>】** Forward: Push the key to skip to next track.
3. **+** Turn Volume up: Press the key to turn volume up
4. **-** Turn Volume down: Press the key to turn volume down.
5. Earphone jack: Insert the earphone into it for audio output.
6. **【▶||】** Play/Pause: First pressing-play; pressing again pause.
7. **【HOLD】** Switch to "lock" state.
8. **【HOLD】** Switch to "unlock" state.

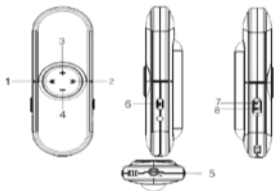

2. MP3 PLAYER FUNCTION:

- Remove the USB cover and insert the USB connector into a suitable slot on your Home PC, Your

PC will display:  .

- It is not necessary to have a battery installed into the player when downloading data files.
- Please download MP3 music from the computer and store them in the USB flash. (The quantity of the songs stored depends on the capacity you choose.) Remove it from computer, insert one AAA battery into battery slot, the LED light turns red, wait 3 seconds, the LED light will flash, plug in the earphones, the player is in power on mode. Press **【▶||】** button to play/pause.

Press **【<<】** to play previous music file.

Press **【>>】** to play next music file.

Press the **【▶||】** button for 2-3 seconds to turn power off, then the LED light will turn off

Volume Adjustment:

In music playing mode, short press VOL+ or VOL- button to turn up or turn down the volume. Please note that if you hold in the VOL button then this will cause the player to change from sequential mode to random/shuffle mode or back.

■ Working mode LED indicator:

◇ When playing music files, the LED light is flashing all the time.

1. Long press **VOL -** button 3 seconds to enter the SEQUENTIAL PLAY mode, the LED light stops flashing.

2. Long press VOL + button 3 seconds to enter the RANDOM/SHUFFLE PLAY mode, the LED light stops flashing.

✧ When in pause state, the LED light stops flashing.

3. MR118 FEATURES:

PORTABLE USB DISK STORAGE

This device can be used as a portable plug & play USB disk (USB 2.0) under Windows ME, Windows 2000 & Windows XP Operation Systems. It can be easily recognized as a removable storage device automatically when plugging into computer USB port.

- Please make sure the LED is off before you remove the USB disk from computer. Otherwise, it'll be possible to lose valuable data.
- Please make sure the player is power off when using the unit as a USB disk.

NOTE: ■ All the Play keys (No.1, 2, 3, 4, 6) have no function when the device is used as a removable storage device.

4. CARE AND MAINTENANCE

- Please ensure the AAA battery is removed before connecting MR118 to USB slot on computer
- Please remove the battery from battery slot while not using the unit for a long time.
- Please do not leave the player at near sources of heat, or subject it to direct sunlight, excessive dust, rain or moisture.

Format the MP3 player

The MP3 player format is "FAT" format. If you will format it, right click "Removable Disk" and select "Format" mode, then click "Start" to format in operating system. As following pictures show:



Note:

- The MR118 is unable to identify the sixth and above sixth level of directory.
- Please setup the **HOLD** button in "unlock" mode before using the player
- Attention should be drawn to the environmental aspects of batter disposal.
- As U-disk, the disk will be write-protected if you switch the hold to lock position.
- The user guide is for reference only.

Technical Specification

No.	Name	Description
1	Capacity of Flash Memory	As stated on MR118
2	USB Interface	USB2.0 (High Speed), Type A
3	Power supply	One 1.5V(AAA/LR03) battery
4	S/N ratio	≥85dB
5	Audio Frequency Range	20Hz – 20kHz
6	Decoding Format	MP3 and WMA (32kbps above)
7	File System	FAT16, FAT32
8	Operating Temperature	5°C ----35 °C (41 °F---95 °F)
9	Operating Moisture	10%—75%

V050509 - MR118 Digital Audio Player

